

- 1. Colecciones
- 2. suspendidas
- 3. Emma
- 4. 5536569



Double flush push-button

COLORES / ACABADOS



69  
Brillo

ARTÍCULOS

| Ref.                    | €/u     | Producto/Conjunto                                                                                                      | Medidas |
|-------------------------|---------|------------------------------------------------------------------------------------------------------------------------|---------|
| 5536569                 | 39,0 €  | Pulsador Doble descarga PL3 Cromo Brillo                                                                               |         |
| Componentes/Instalación |         |                                                                                                                        |         |
| 55400                   | 210,1 € | Pro WC System. Soporte para inodoro con cisterna de doble descarga ajustable a 6/3 litros, 4,5/3 litros y 4/2 litros.  |         |
| 55410                   | 166,3 € | Basic WC System. Tanque para inodoro con cisterna de doble descarga ajustable a 6/3 litros, 4,5/3 litros y 4/2 litros. |         |
| 55411                   | 111,8 € | Basic Tank System. Tanque empotrable con mecanismo de doble descarga ajustable a 6/3 litros, 4,5/3 litros y 4/2 litros |         |

INFORMACIÓN DE PRODUCTO

Características  
Dual push-button PL3 Chrome gloss.

Garantía  
Gala products are guaranteed against any manufacturing defects, from the date of purchase of the product, only if the installation has been carried out in accordance with Gala’s installation instructions and, applying the current legislation on electrical and sanitary appliances, by authorised staff. The guarantee period is of 5 years.

Instalación

Please check our product installation manuals.

#### Certificaciones

High quality is a constant at Gala in order to guarantee the technical and aesthetic features as well as the performance of our products. Please check our product quality certificates.


#### Mantenimiento

For periodical cleaning use a soft cloth and soap and water. Dry the push-button after cleaning. If you use cleaning products such as gels, liquid cleaners or anti-limescale products, always read the manufacturers' instructions first. After using the products always rinse the push-button with clean water. Do not use abrasive products such as bio-alcohol, bleach, hydrochloric acid, ammonia, acetone or other similar products. Do not use aggressive scourers.

#### **AMBIENTE**



#### **DIBUJOS TÉCNICOS**

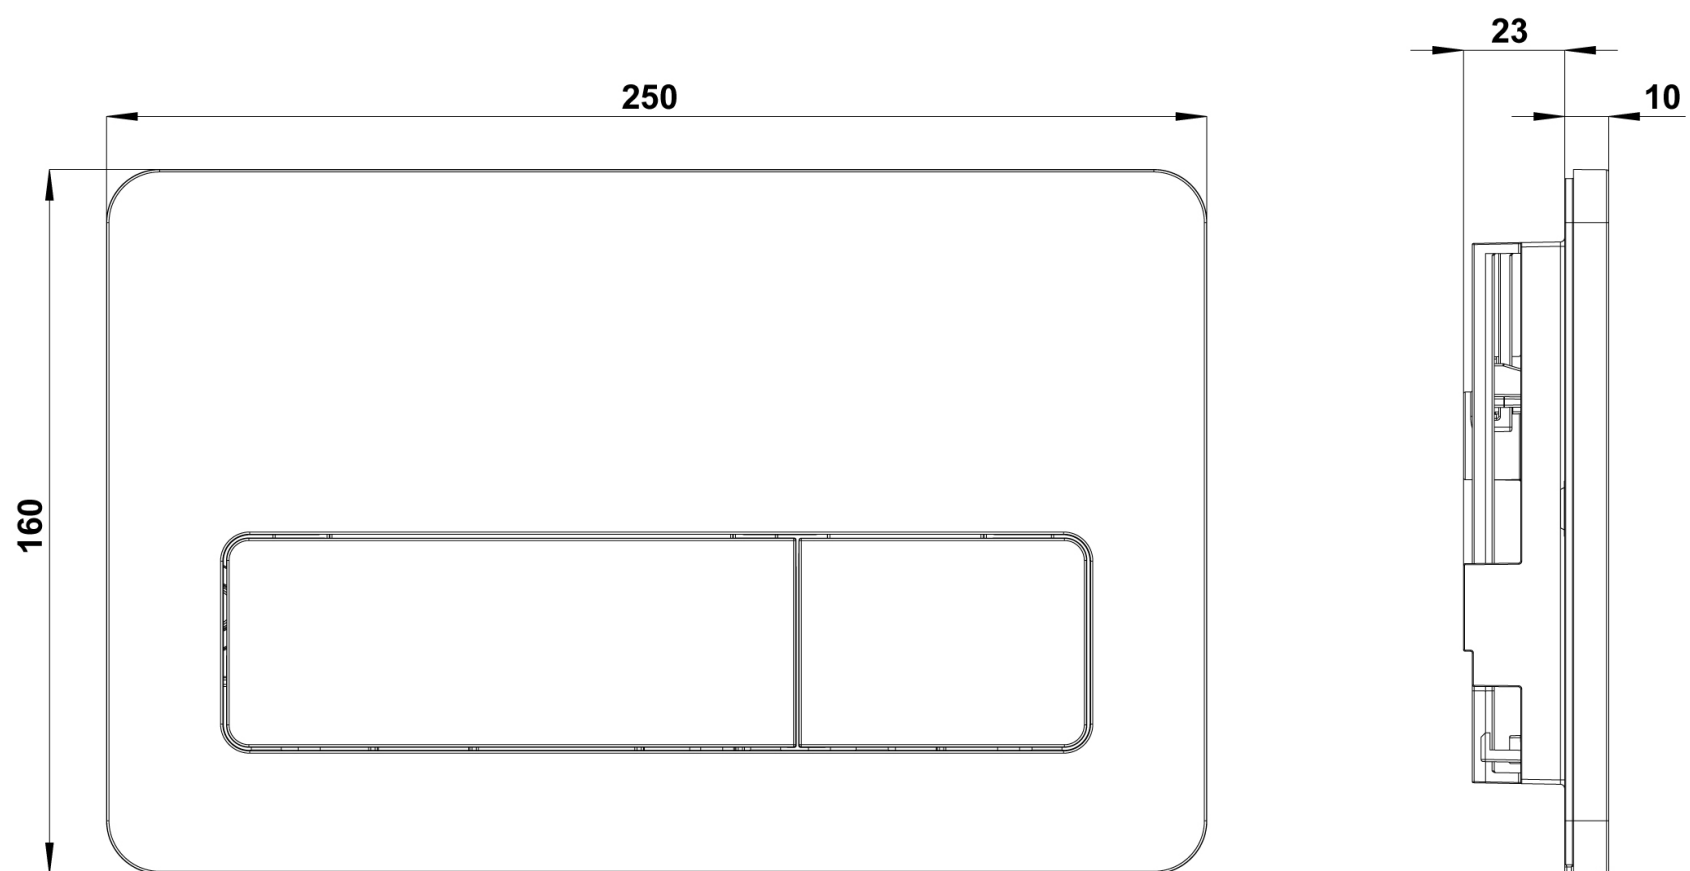

DESCARGAS

2D

-  91.36 KB  Double flush push-button - Técnico (.AI)
-  73.1 KB  Double flush push-button - Técnico (.DWG)
-  547.27 KB  Double flush push-button - Técnico (.DXF)
-  97.02 KB  Double flush push-button - Técnico (.PDF)



-  ArchiCAD 
-  Revit 

VÍDEOS